

Пульт дистанционного управления универсальный

ДУ-15 X

TYPE: **RM-RH07**

 **PHILIPS**



Описание:

Пульт для телевизора + DVD PHILIPS (HUAYU) RM-PH07 (LCD/TV/DVD/AUX)
универсальный. Пульт заменяет следующие виды пультов:

RC DVD530; RC0301/01; RC0764/01; RC0767; RC1153001/01; RC1153014;
RC1153038/00; RC1153053/00; RC1683701/01; RC1683702/01;
RC1683706/01; RC19002; RC19039001; RC1904; RC19042001;
RC19042003/01; RC19042006/01; RC19042008/01; RC19042009/01;
RC19042021; RC19137002; RC19245011/01; RC19245026/01;
RC19335003/01; RC19335004; RC19335005/01; RC19335009/01;
RC19335014; RC19335019/01; RC19335020/01; RC19335021/01; RC2020;
RC2060/01B; RC2143606/01; RC2512; RC2513; RC2514; RC2517;
RC2529/01; RC2575; RC2822/01; RC282901; RC282921; RC2835/01;
RC283501; RC283502/01; RC2882/01; RC2K11; RC2K12; RC2K14; RC400;
RC4350/01B; RC4401; RC4450/01B; RC520; RC5536; RC6805; RC7502;
RC7507; RC7533; RC7535; RC7599; RC7802; RC7802-S; RC7805; RC7806;
RC7807; RC7808; RC7812; RC7812-S; RC7940;
RC7941; RC7952; RC7953; RC7954; RC7959; RC7962; RC7974; RC8201/01;
RC8205; RC8205/21; RC8207-B; RC8207-S; RC8211/01; RC8922; RC8925;
RC8927; RT-712; SAA3010T; SBC RU 258; SRU740; UR12