

Пульт дистанционного управления универсальный

ДУ-44 П

TYPE: **D006A001**

JVC



Описание:

D006A001 заменяет следующие пульты JVC:

RM-C1013; RM-C110; RM-C115; RM-C117
RM-C122; RM-C1261; RM-C1302; RM-C1303
RM-C1307; RM-C1309; RM-C1311; RM-C1350
RM-C1351; RM-C214; RM-C220; RM-C223
RM-C225; RM-C227; RM-C232; RM-C235
RM-C237; RM-C239; RM-C300; RM-C331
RM-C333; RM-C334; RM-C348; RM-C355
RM-C357; RM-C360; RM-C361; RM-C362
RM-C364; RM-C368; RM-C402; RM-C407
RM-C408; RM-C416; RM-C423; RM-C430
RM-C430S; RM-C438; RM-C439; RM-C440
RM-C447; RM-C448; RM-C457; RM-C459
RM-C461; RM-C462; RM-C463; RM-C470
RM-C472; RM-C477; RM-C480; RM-C482
RM-C483; RM-C485; RM-C488; RM-C495
RM-C498; RM-C530; RM-C547; RM-C548
RM-C549; RM-C565; RM-C567; RM-C601
RM-C620; RM-C637; RM-C680; RM-C683
RM-C696; RM-C70; RM-C90; RM-C92
RM-C993; RM-C995; RM-C996