

Пульт дистанционного управления TV

ДУ-51 П

TYPE: **6710V00090D**

Описание:

Этот пульт подходит к следующей аппаратуре:



телевизор LG 21FE3RGE-TY; CE-20F60K; CE-20T20K; CE-21F60KX; CE-21M64K
телевизор LG CE-21M66KX; LG CE-21T22KX; CF-14D10K; CF-14F60K
телевизор LG CF-14F80K; CF-14F90K; CF-14I30K; CF-14i30KEX; CF-14i30KX;
телевизор LG CF-14J50K; CF-14K40KE; CF-14K41KE; CF-14S13KE
телевизор LG CF-16K40KE; CF-16K41KE; CF-20F60K; CF-20F80K; CF-20i30K;
телевизор LG CF-20i30KEX; CF-20i30KX; CF-20J50K; CF-20K40KE
телевизор LG CF-20K41KE; CF-20K51KE; CF-20K53KE; CF-20S11KE; CF-20S13KE;
телевизор LG CF-20S31KE; CF-20S41KE; CF-20S43KE; CF-20T30K
телевизор LG CF-20T31KS; CF-20T60; CF-2130KE; CF-21CA810EX; CF-21D31KE;
телевизор LG CF-21F60K; CF-21F80K; CF-21i30K; CF-21i30KEX
телевизор LG CF-21i30KX; CF-21J50K; CF-21K40KE; CF-21K41KE; CF-21K53KE;
телевизор LG CF-21Q42KEX; CF-21S11KE; CF-21S13KE; CF-21S31KE
телевизор LG CF-21S41KE; CF-21S43KE; CF-21T20K; CF-21T30EX; CF-21T30K;
телевизор LG CN-20T20K; CT-14K40KE; CT-14K41KE; CT-14S10KE
телевизор LG CT-15Q91KE; CT-16K40KE; LG CT-16K41KE; CT-20F60K; CT-20J50K;
телевизор LG CT-20K40KE; CT-20K41KE; CT-20T30KE; CT-21F60K
телевизор LG CT-21K40KE; CT-21K41KE; CT-21Q20; LG CT-21Q21
телевизор LG CT-21Q21KE; CT-21Q22; CT-21Q40; CT-21Q41
телевизор LG CT-21Q41KE; CT-21Q42KEX; CT-21Q60; CT-21Q61
телевизор LG CT-21Q62; CT-21Q64; CT-21Q65; CT-21Q65KE
телевизор LG CT-21Q65KEX; CT-21Q66; CT-21Q90; CT-21Q91
телевизор LG CT-21Q92; CT-21T30KE; RE-20CB10MX; RE-21FB30RX
телевизор LG RE-21FB50RX; RE-21FD10RX; RF-14CA80M; RF-14CA80MX
телевизор LG RF-14CC20MX; RF-15FB50M; RF-20CA80VE; RF-20CA80VM
телевизор LG RF-20CA80VQ; RF-20CC20M; RF-20CC20V; RF-21CA80M
телевизор LG RF-21CA80MX; RF-21CA80VE; RF-21CA80VM; RF-21CA80VQ
телевизор LG RF-21CB90VQ; RF-21CC20M; RF-21CC20V; RF-21FB20R
телевизор LG RF-21FB30VX; RT-14CA50M; RT-14CA52M; RT-14CA80M
телевизор LG RT-14CA80MX; RT-14CC20M; RT-15FB50ME; RT-17FB70V
телевизор LG RT-20CA50M; RT-20CA60M; RT-20CA70M; RT-20CA80VE
телевизор LG RT-20CA80VM; RT-20CA80VQ; RT-20CB10M; RT-20CC20M
телевизор LG RT-20CC20V; RT-20CC20VX; RT-21CA50M; RT-21CA60M
телевизор LG RT-21CA70M; RT-21CA80M; RT-21CA80MX; RT-21CA80VE
телевизор LG RT-21CA80VM; RT-21CA80VQ; RT-21CC20M; RT-21CC20V
телевизор LG RT-21CC20VX; RT-21FA31; RT-21FB20RE; RT-21FB20V
телевизор LG RT-21FB20VX; RT-21FB30M; RT-21FB30MX; RT-21FB30V
телевизор LG RT-21FB30VX; RT-21FB50RQ; RT-21FB50V; RT-21FB50VE
телевизор LG RT-21FB50VX; RT-21FB70RN; RT-21FB70RQ; RT-21FB70RX
телевизор LG RT-21FB70V; RT-21FB70VX; RT-21FB70VX; RT-21FB90RQ
телевизор LG RT-21FC40RQ